



Create Beautiful Lines
with Keystone Insignia™ Edger!



Leave a lasting impression with this beautiful and easy-to-install edging system that accents any landscape or garden design. Keystone Insignia™ Edger is a mortarless, high strength concrete system with the appearance of natural stone.



Distributed By:



4444 West 78th Street • Minneapolis, MN 55435 • www.keystonewalls.com

1-888-601-2326

retailsupport@keystonewalls.com

www.keystoneretailproducts.com

We reserve the right to improve our products and make changes to the specifications and design without notice. The information contained herein has been compiled by KEYSTONE and to the best of our knowledge, accurately represents the KEYSTONE product use in the applications which are illustrated. Final determination of the suitability for the use contemplated and its manner of use are the sole responsibility of the user.

©2010 Keystone Retaining Wall Systems, Inc. • KIE0104
Patents: US D488,569S • US D479,342S • Additional Patents Pending

Beautiful Lines



Lawn & Garden Applications



Keystone Insignia™ Edger is a new edging solution for garden borders, walkways, and tree rings!

Keystone Insignia™ Edger is the perfect addition to any landscape design. Straight lines and graceful curves are a natural creation with this easy-to-use system. Each unit is lightweight (9 lbs) and can easily be installed by the do-it-yourself gardener or homeowner.

Installation Steps




Step 1 Lay out the line or curve you would like your edging system to follow. With a spade or flat shovel, dig a shallow trench to approximately 3" deep by 6" wide to receive the edging unit. Prior to placing the units, provide a layer of landscape fabric in the trench, below and up the sides of the Keystone Insignia™ Edger.



Step 2 Place units in the trench, over the landscape fabric, in either a straight line or a curved alignment. Interlock the overlap edge detail of the A & B units in an alternating manner to connect the system to its final geometry.



Step 3 Adjust unit alignment by hand or by using a rubber mallet to tap the units in place. Finalize your installation by placing landscape rock, mulch, sod, or other similar materials to achieve your final design appearance.

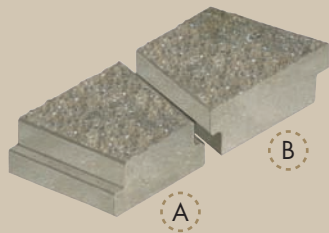

Piece #	A	B
Unit Height	3"	3"
Unit Front Width	4.75"	8"
Unit Back Width	6.75"	6"
Unit Depth	5"	5"
Block Wt. (lbs.)	9	9

Unit weights may vary.

Keystone Tips:

- Suggested Tools: shovel, gloves, and a rubber mallet.
- Pre-plan your design by laying out the units before digging.
- Units can be slightly offset from one another for a more random appearance.
- Lock units in place by putting landscape rock, mulch, bark, dirt, pavers, or sod to the edge of the units.
- Make sure you purchase equal amounts of both A & B units for optimal results.

Design Options:

- Convex & concave curves may be built by simply placing A & B units in an alternating order making the narrow and wide ends of the edgers adjacent to each other.
- Straight alignment is achieved by placing A & B units in an alternating pattern where wide and narrow ends are opposite of each other.
- Gradual curves can be built through a combination of alternating straight and curved portions of the edging.
- Units are removable for relocation.